

Theme: Operating description of the control panel		
Theme area:	Electrical	Telephone: +49 (0)40/ 739 606 – 42
Version	06/2009	Date: 18.06.2009

Check the functions

Function	Button	cable color/connector No.
Lifting	1+2	brown / 2+ grey / 3
Lowering	3+4	blue / 4 + white / 5
Closing	1+4	brown / 2 + white / 5
Opening	2+3	grey / 3 + blue /

Table 1


Red-plus

1	2	3	4	5	6
black	brown	grey	blue	white	green/yellow
+					-
+					-
+					-
+					-

Table 2



More technical information and news can be found under
www.soerensen.de

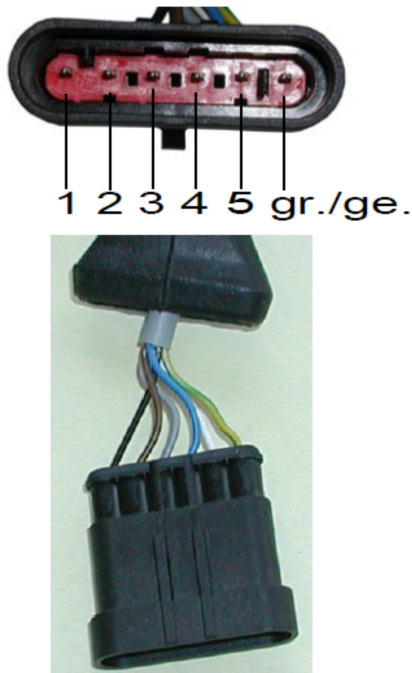

Important !

Before the check, make sure that all the functions are working with the service switch.

1. Slide up the rubber cover from the control panel connector
2. Connect a plus cable to the black cable and a minus to the green/yellow cable
3. If you push the buttons as indicated in table one under buttons, the plus signal must arrive at the connector as indicated in table 2
4. If all the signals arrive to the connector as indicated in table 2, the default is located in the Unit Control Box 12/24 volts with part number 20 908 210

More technical information and news can be found under
www.soerensen.de